



POULLAILLER AVIZEN

PLAN DE MONTAGE

- 
A M3.5x60 33+2pcs
B M3.5x50 8+2pcs
C M3.5x35 32+2pcs
D M3.5x25 36+2pcs
E M3 x16 14+2pcs

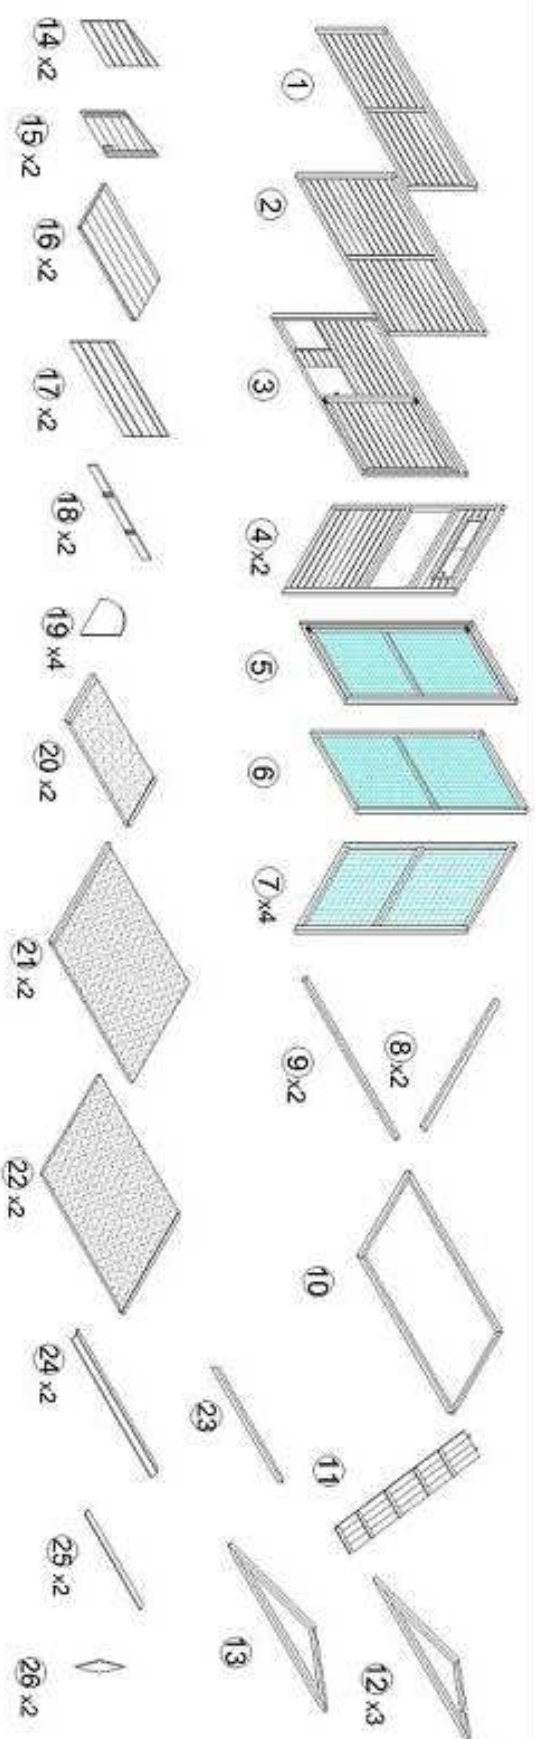


 **C** M3.5x35 6x2pcs

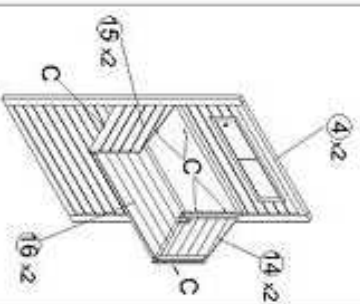


ETAPE 1

 **D** M3.5x25 6x2pcs

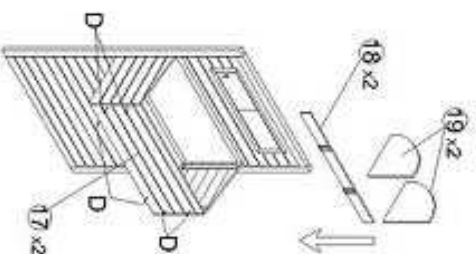


ETAPE 2

 **E** M3x16 6x2pcs

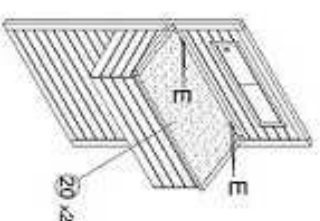


ETAPE 3

 **A** M3.5x60 12pcs

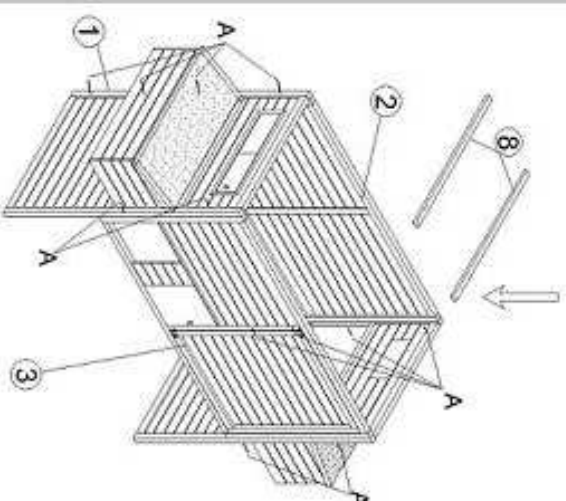


ETAPE 4

 **E** M3x16 2pcs

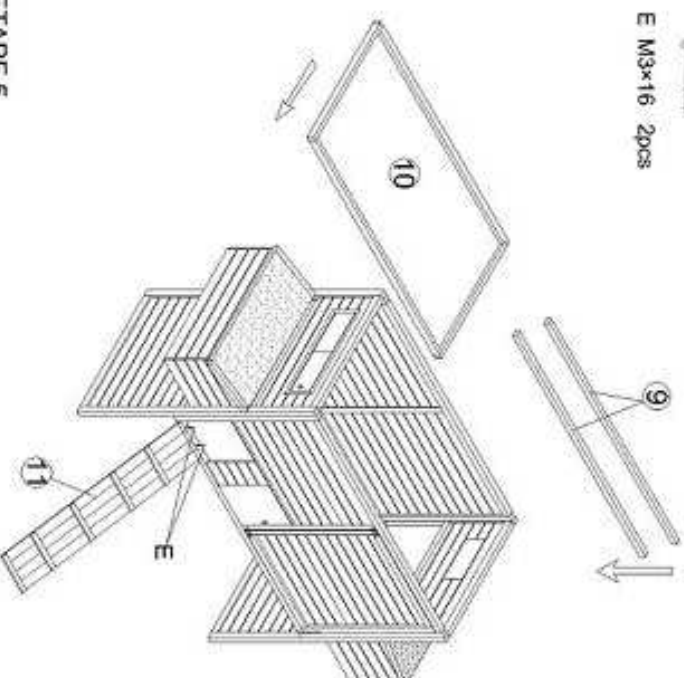


ETAPE 5


A M3.5×60 21pcs

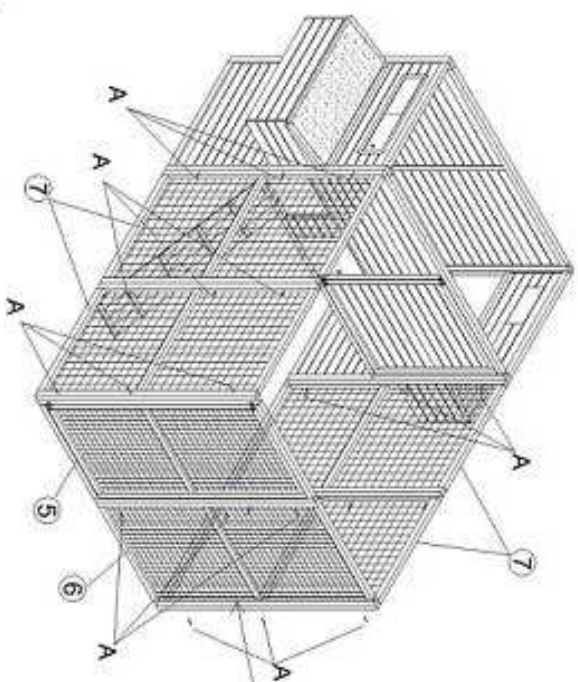

C M3.5×35 2pcs

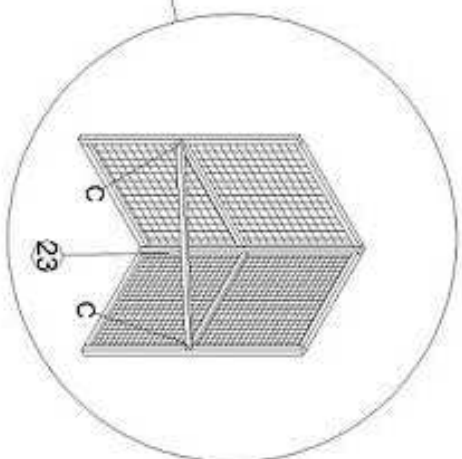

B M3.5×50 8pcs
C M3.5×35 2pcs

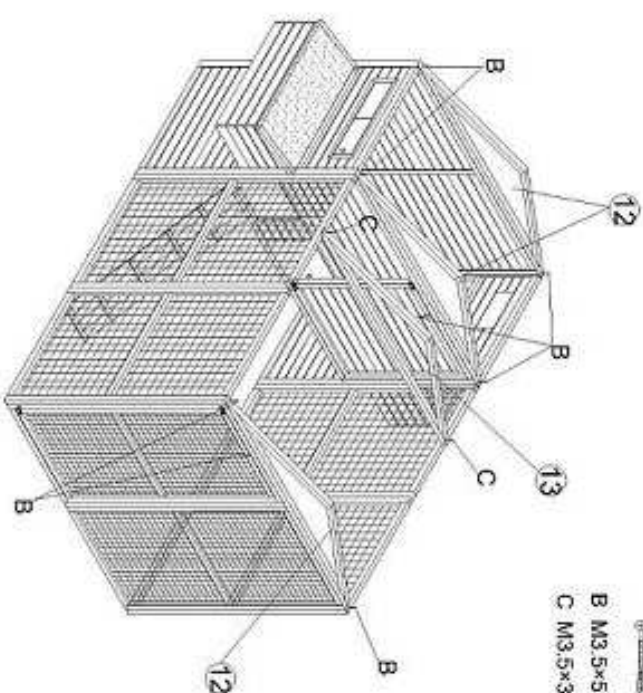


ETAPE 6


ETAPE 7

ETAPE 8

C M3.5×35 16pcs

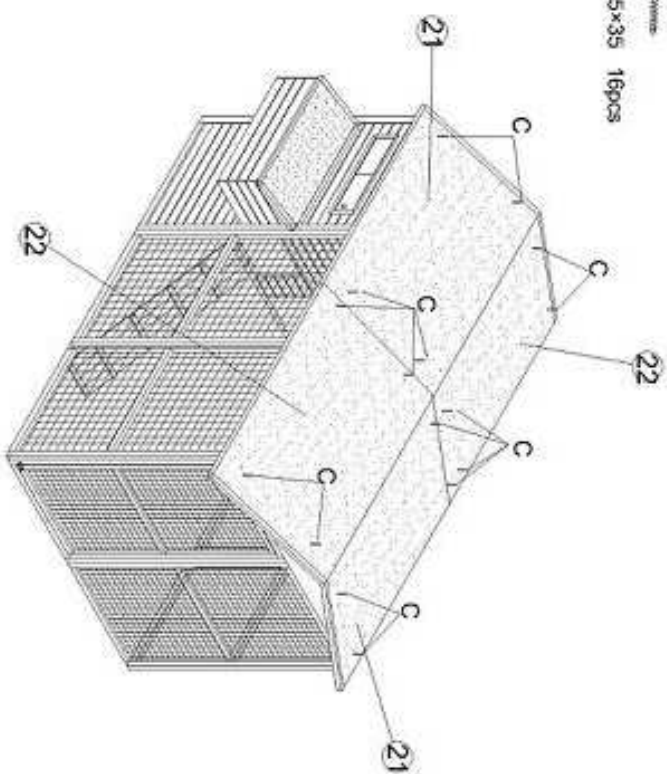

D M3.5×25 24pcs

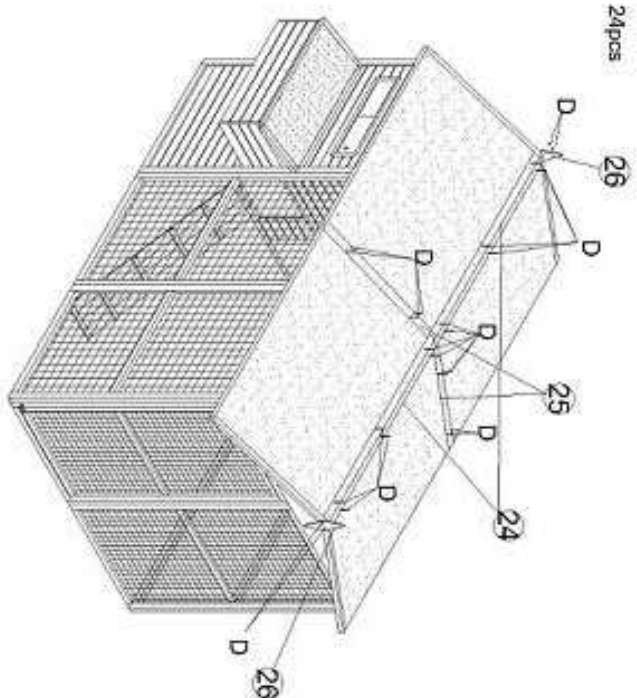

ETAPE 9

ETAPE 10